

USER GUIDE





Thank you for purchasing a Danew product. Before using the device, read carefully the operation instructions presented in this manual. It aims at familiarizing you with the technical features of your KONNECT 202 in order to make operation easier.

NOTE : All information presented in this manual and on the box were current at the time of printing. However, as we are permanently enhancing our products through software updates, this manual and the box might not present all the functions of your actual product.

Pictures are for illustration purpose only and are not contract-binding.



KONNECT 202

CONTENTS

P.6

1 - INTRODUCTION

P.6

Features

P.7

Buttons & Device parts

P.8

2 - BATTERY

3 - BASIC OPERATION

P.10

4 - MESSAGES

P.11

5 - CALL HISTORY

P.12

6 - MULTIMEDIA

P.12

Camera

P.12

Audio player

P.12

Video player

P.13

Gallery

P.14

FM Radio

P.14

7 - FILE MANAGER

P.15

8 - FREQUENTLY ASKED QUESTIONS

P.16

9 - LEGAL INFORMATION

FEATURES

Screen	1.77" TFT
Resolution	128 x 160 px
Processor	MT6261M
Network	GSM 850/900/1800/1900 Mhz
Bluetooth	Yes
Camera	0.08Mpx
Battery	1800 mAh
Speaker	1W
Connectors	3.5 mm line out/ Micro USB
Micro SD slot	Up to 16GB
Dimensions	47.2 x 108.35 x 16.5 mm
Weight	85 g

BUTTONS & DEVICE PARTS



2 BATTERY

The Konnect 202 uses a rechargeable battery. Please use specific battery, otherwise it may cause damage. New battery needs charging and discharging completely three times (the time for every charging should be around 6 hours). It is recommended to charge the mobile phone after it turns off automatically due to low battery power.

- Plug the charger into the power supply, plug the USB connector into the USB jack correctly.
- In the "On" state, if the connection succeeds "Charge connected" will display on the screen.
- After the battery is fully charged, the icon is full of bars.

3 BASIC OPERATION

Switch on	Insert SIM and SD card, install battery, restore the battery cover and press the power key for several seconds or so to turn on the device.
Switch off	Press the power key for several seconds or so to turn off the device.

Dial a call	Input complete phone number, or access to Phonebook and pick up a contact's number, press call key to dial out. Dial international telephone number you should input «+» plus country number plus complete telephone number and then dial out. (in order to get the «+» , tap «*» twice till «*» displays on the screen)
Turn the volume	When your are engaged in a call, you may press volume UP or volume Down to turn the volume. Same for audio player.
Answer the call	Press call key to answer an incoming call. Press End/Power key to reject the call.
Latests calls	The device can store 20 latest calls logs. In standby mode, press call key and the call logs from SIM1 or SIM2 will display.
Options during call	While engaged in a call, you can use the following options: Hold / End single call / Phonebook / Call History / Messages / Mute / Volume.

4

MESSAGES

You can receive and send message and can also use broadcast message. Message make it possible for you to exchange message With other wireless phone users. Select Message to perform operation.

You can write a new text message send to others, select the Option after editing a text message:

Send	send the message only
Edit recipient	Edit the telephone number
Remove recipient	Remove recipient
Remove all recipient	Remove all recipient
Save	Save the message

5

CALL HISTORY

From the Home page, press «call key» to view the dialed calls and answered calls, you can also examine the call time.

Press Option key to perform following operation:

View	View call duration
Call	Call selected number
Send a text message	Send a message to the selected number
Save to Phonebook	Saves the selected number to the Phonebook
Add to Blacklist	Block this number from contacting you
Delete	Delete this number from your history logs

Your phone offers multimedia applications.

6.1 CAMERA

Your phone has a camera that you can take photos whenever and wherever you like. After taking photos, store them in the phone memory or memory card (if any).

Camera Setting	Press left soft key to open Option in viewfinder display and make detail setting.
----------------	---

6.2 AUDIO PLAYER

You can use the audio player to broadcast music. Press OK key to play the current music, and press it again to pause the current music. Press the Left direction key to switch to the before, and right direction key to switch to the next. You can adjust the volume of the MP3 player through the volume - / + key.

6.3 VIDEO PLAYER

Tap Video Player to open it and view all video files. Press the Options and perform following operations on the selected video: play, send, rename, delete.

During video playback, press the 4-way navigation key up-' and down for full mode screen or stop the video, left or right key to switch next or previous video .

6.4 IMAGE VIEWER

You can perform the following operations:

View	View photos
Send	Send the current photo through Bluetooth
Wallpaper	Apply the background
Rename	Modify the photo's name
Delete	Delete the selected photo
Image information	Resolution / size / create time

6.5 FM RADIO

Choose Radio menu to turn the radio function.

Note : While tuning the radio in, you can dial or hear the call normally. When on the phone, the volume of the radio will become silence automatically

7

FILE MANAGER

Tap from the main menu to open it and you can find the storage devices and the capacity of total space and free space. On different objects, there are different operations.

8 FREQUENTLY ASKED QUESTIONS

How to lock / unlock keypad?	To lock: Press «Menu» then «*» to lock the phone. To unlock: When the device entered sleep mode, press any key to wake up, then press Unlock and «*» key to unlock keypad.
How to activate the Silent mode?	On Home menu, long press # key till "Silent mode activated" displays on the screen; long press # key again to activate the general mode.
How to activate Phone lock?	On Home screen, tap Main menu key > Settings > Security settings > Phone security > Phone lock, you will be asked for "input phone password", please input "1234". After you activated the phone lock, you would be asked for a password the moment you power on the device next time, please input "1234" again.

EUROPEAN UNION DIRECTIVES CONFORMANCE STATEMENT

Hereby, Danew declares that this product is in compliance with:

The essential requirements and other relevant provisions of Directive 1999/5/EC

C € 0700 !

SUPPORT & WARRANTY*

For firmware updates, please visit our website www.danew.com and the Support and Drivers & Manuals section. Visit the website www.danew.com the Product registration section.

For customer service requests, you should first contact the technical support in order to get the Return Merchandise Authorization RMA number. Returns without RMA number previously obtained will not be accepted. Danew reserves the right to verify that device malfunction is not a result of improper use or manipulation by the user.

TECHNICAL SUPPORT

0899 782 278 (France),

Our technical support team will answer your questions from :

- Monday to Thursday, from 9h00 to 13h00, from 14h00 to 18h
- Friday from 9h00 to 13h00, from 14h00 to 17h.

**Product with 1 year warranty and accessories with 1 month warranty starting from the purchase date.*

SAR

YOUR MOBILE DEVICE MEETS FCC AND IC LIMITS FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) adopted by the Federal Communications Commission (FCC) and Industry Canada (IC). These limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the FCC and IC guidelines for your device model are listed below:

Highest SAR values for this device	
Head SAR	0,557 W/kg
Body SAR	1,161 W/kg

During use, the actual SAR values for your device are usually well below the values stated. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

If you are interested in further reducing your RF exposure then you can easily do so by limiting your usage or simply using a hands-free kit to keep the device away from the head and body.

Copyright & trademarks

Certain features, services and applications are network-dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Danew reserves the right to change or modify any information or specifications without notice or obligation.

Note: The images in this guide are examples only.

© 2016 DN Electronics. All rights reserved.

Caution: Danew does not take responsibility for changes/modification to the transceiver.

